
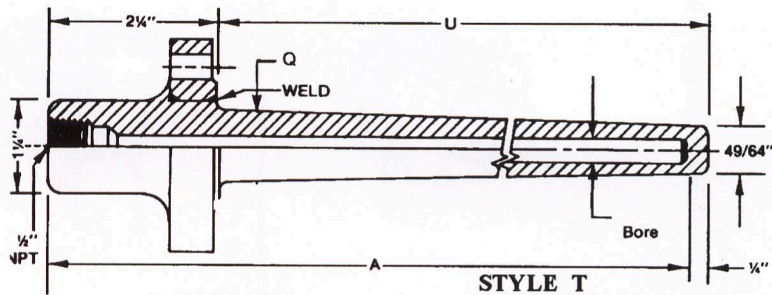
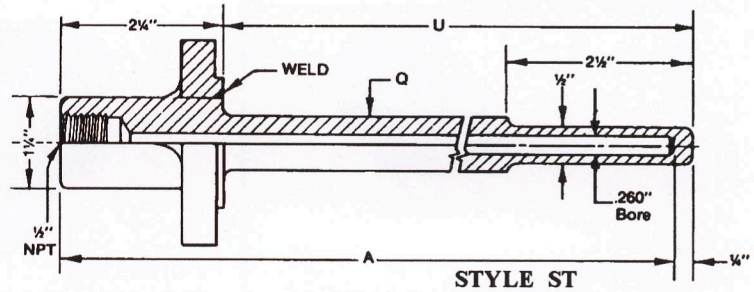


FLANGED THERMOWELLS

STEPPED * TAPERED * STRAIGHT

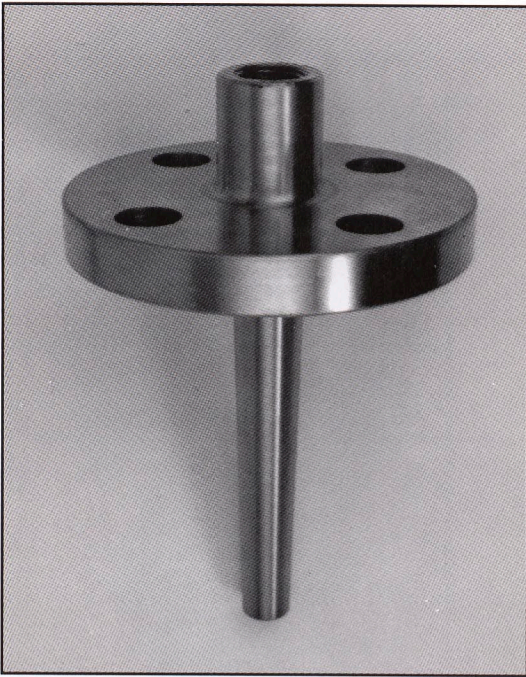

CODE	"Q"	BORE	STYLE
703ST	3/4"	.260	STEPPED
702ST	7/8"	.385	STEPPED
703S	3/4"	.260	STRAIGHT
702S	7/8"	.385	STRAIGHT
703T	7/8"	.260	TAPERED
702T	11/16"	.385	TAPERED

FLANGE CODE		
SIZE	RATING	DESIGN
1"	150#	RF= RAISED FACE
1 1/2"	300#	
2"	600#	FF = FLAT FACE
2 1/2"	900#	
3"	1500#	RTJ = RING JOINT

HOW TO ORDER:

EXAMPLE: 703T

R

1 1/2" X 150#RF

6.50"

STYLE

SELECT CODE PART NUMBER FROM THE ABOVE TABLE.

MATERIAL

P 304SS
R 316SS
Q 310SS
J INCONEL
M MONEL
T TANTALUM
O SPECIFY

FLANGE CODE

SELECT FLANGE CODE.....
SIZE, RATING AND DESIGN.
FLANGE MATERIAL SAME AS SHANK UNLESS NOTED.....

" U " LENGTH

REFERS TO THE INSERTION LENGTH MEASURED FROM THE BOTTOM OF THE "P" THREADS TO THE TIP OF THE THERMOWELL IN INCHES.....

MTI - INDUSTRIAL TEMPERATURE SENSORS

Thermocouples...RTD's...Thermowells..Wire..Cable...Accessories
www.mtisensors.com (972) 436 - 3033 Fax (972) 436 - 2655